
c. Kung Fu Master

COMPONENT SIDE	PIN NUMBERS		SOLDER SIDE
GROUND	1	2	GROUND
GROUND	3	4	GROUND
	5	6	
COIN COUNTER A	7	8	
1P CONTROL LEFT	9	10	2P CONTROL LEFT
1P CONTROL RIGHT	11	12	2P CONTROL RIGHT
1P CONTROL PUNCH	13	14	2P CONTROL PUNCH
1 PLAYER START	15	16	2 PLAYER START
	17	18	COIN COUNTER B
COIN SWITCH B	19	20	VIDEO SYNC
+ 12 VOLTS	21	22	+ 12 VOLTS
+ 12 VOLTS	23	24	+ 12 VOLTS
SPEAKER (-)	25	26	SPEAKER (+)
1P CONTROL KICK	27	28	2P CONTROL KICK
VIDEO RED	29	30	VIDEO GREEN
VIDEO BLUE	31	32	
2P CONTROL UP	33	34	2P CONTROL DOWN
1P CONTROL UP	35	36	1P CONTROL DOWN
SERVICE SWITCH	37	38	COIN SWITCH A
+ 5 VOLTS	39	40	+ 5 VOLTS
+ 5 VOLTS	41	42	+ 5 VOLTS
GROUND	43	44	GROUND

HARNESS CONNECTOR, EMI FILTER PCB

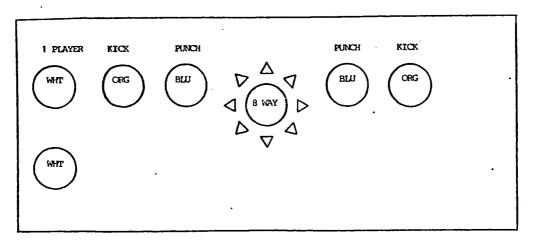

CONTROL PANEL LAYOUT

c. Kung Fu Master (continued)

OPTION TABLES

DIPSWITCH 1		1	2	3	4	5	6	7	8
DIFFICULTY	NORMAL:	OFF							İ
	HARD:	ON							
DECREASE OF	- NORMAL:	-	OFF						
ENERGY	FAST:		ON						
NUMBER OF	THREE:			OFF	OFF				
LIVES	TWO:			ON	OFF				
	FOUR:			OFF	ON				1
	FIVE:		***	ON	ON_				
COIN	1 COIN=1 PLAY:					OFF	OFF	OFF	OFF
OPTIONS	2 COIN=1 PLAY:		~.			ON	OFF	OFF	OFF
	3 COIN=1 PLAY:					OFF	ON	OFF	OFF
	4 COIN=1 PLAY:					ON	ON	OFF	OFF
	5 COIN=1 PLAY:					OFF	OFF	ON	OFF
	6 COIN=1 PLAY:					ON	OFF	ON	OFF
SW3 OF	1 COIN=2 PLAY:					OFF	OFF	OFF	ОИ
DIPSW 2	1 COIN=3 PLAY:					ON	OFF	OFF	ON
MUST BE	1 COIN=4 PLAY:					OFF	ON	OFF	ON
OFF	1 COIN=5 PLAY:					ON	ON	OFF	ON
	1 COIN=6 PLAY:					OFF	OFF	ON	ON
	FREE PLAY:					ON	ON	ON	ON

						-		~	0
DIPSWITCH 2		1	2	<u> </u>	_4	5	6		8
FLIP PICTURE	NO:	OFF							
	YES:	ON							
CABINET TYPE	TABLE:		OFF						
	UPRIGHT:		ON						
MUST BE OFF				OFF	OFF		OFF		
FREEZE PICTURE	NO:					OFF			
MODE *	YES:					ON			
NO DEATH MODE	NO:			· ·				OFF	
	YES:							ON	
DIAGNOSTIC TEST	110:	\							OFF
MODE	YES:								ON

^{*} PRESS 2 PLAYER START BUTTON TO FREEZE PICTURE. PRESS 1 PLAYER START BUTTON TO CONTINUE.